


If using Isoflurane anesthesia, connect exit of PEEP bottle to scrubber or evac system.

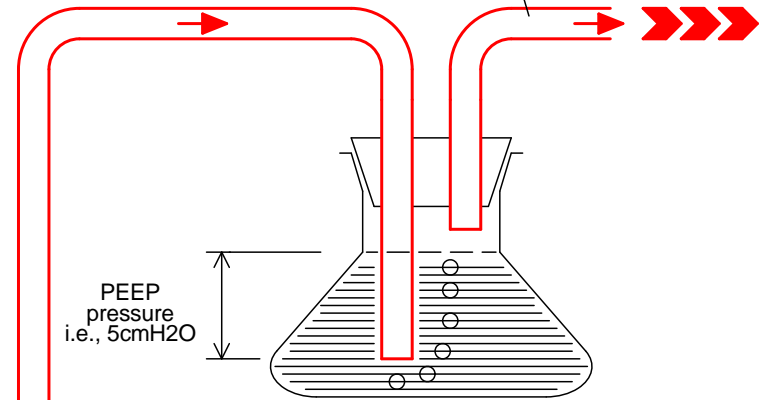

PEEP setup  
(Submerge EXP AIR tubing under column of water)

# PEEP setup using SAR-1000 ventilator